


Entry Lights Control System

Control Unit Input Test


1. Before testing, troubleshoot the multiplex control system (see page 22-149).
2. Remove the driver's dashboard lower cover (see page 20-73).
3. Disconnect the under-dash fuse/relay box connectors 0, Q, X and Y.

NOTE: All connectors are wire side of female terminals.


UNDER-DASH FUSE/RELAY BOX CONNECTOR O (12P)

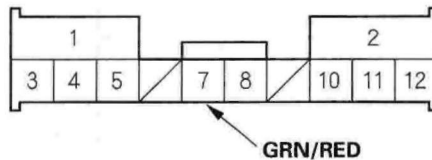


UNDER-DASH FUSE/RELAY BOX CONNECTOR Q (8P)

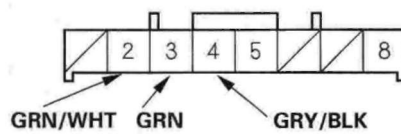

UNDER-DASH FUSE/RELAY BOX CONNECTOR X (8P)

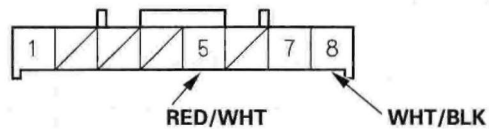

UNDER-DASH FUSE/RELAY BOX CONNECTOR Y (13P)

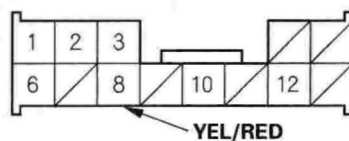

4. Inspect the connector and socket terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, go to step 5.